

## SMART-PRO (TROLLEY)

### DISPLAY MODE

DIS00 : SM_Pro_Ref	0
DIS01 : Ramp Output	0
DIS02 : Act Spd FB In[+/-20000]	0
DIS03 : Ramp In [+/-20000]	0
DIS04 : Length In [+/-20000]	0
DIS05 : CTRL Mode	0
DIS06 : As On Enable	0
DIS07 : Ang_FB_B_Sim	0
DIS08 : SM_Pro Ang FB	0
DIS09 : ST4_Scan_1scan	0
DIS10 : DI Status [7-0]	0
DIS11 : DO Status [7-0]	0
DIS12 : Spd Devation	0
DIS13 : Ang Amplitude_P	0
DIS14 : Ang Amplitude_N	0
DIS15 : Pendulum Period	0
DIS16 : Analog Input Value	0
DIS17 : Holding Load	0
DIS18 : P_Xpos_Fnl	0
DIS19 : SD_Gain	0

### PROFI-BUS DP (READ)

DPR00 : Joystick Ref In	0
DPR01 : M_Length In	0
DPR02 : Act SPD Feedback	0
DPR03 : PLC_Cmd Word4	0
DPR04 : Line Spd (m/meter)	0
DPR05 : Pend_T_In	0
DPR06 : SP	0
DPR07 : SP	0

### PROFI-BUS DP (WRITE)

DPW00 : SM_Pro_Ref	0
DPW01 : X_Pos_Dis	0
DPW02 : SM_xxxx	0
DPW03 : SM Cmd Word4	0
DPW04 : SP	0
DPW05 : SP	0
DPW06 : SP	0
DPW07 : SP	0